

FIRE SERVICE

Fire Service Key Switches



MIS-189-CTFS-001



MIS-189G-A



MIS-189G-B



MIS-189Q



MIS-189R



MIS-189Y-KS



MIS-189Z-KS

S.E.E.S. #	O.E.M. #	Description
MIS-189-CTFS-001		Fire Service Key Switch, PH I, 3 Pos, Rmv2 with BFD-1 key
MIS-189AH		Keyswitch, 3 Position, Rmv2 Center & Clockwise A03 Key, Prewired
MIS-189G-A		Key Switch, 3 Position, Rmv2, Ph II, FSKS MFD1 Key
MIS-189G-B		Key Switch, 3 Position, Rmv2, Ph I, FSKS MFD1 Key
MIS-189Q	618-1	Key Switch Assembly, Phase I (HALL) 3502, fire service
MIS-189R	618-2	Key Switch Assembly, Phase II (CAR) 3502, fire service
MIS-189Y		Fire Key Switch Assembly, 2642 key, 3 Position, Rmv2, PH I Byp-off-On
MIS-189Y-KS		Fire Key Switch Assembly, 2642, PH1 Hall Cylinder, Bracket and Switch
MIS-189Y-R		Fire Key Switch Assembly, 2642 key, 3 Position, Rmv2, PH I Reset-off-On
MIS-189YY		Fire Key Switch Assembly, 2 Position, Rmv2, Off-On, 2642 key
MIS-189Z-KS		Fire Key Switch Assembly, 2642, PH2 Car Cylinder, Bracket and Switch
MIS-189ZZ		Fire Key Switch Assembly, 2642 key, 2 Position, Rmv1, PH II (Off-On)
SEES-2642-005		Cylinder, Yale Cylinder 2642 PH1, 3 Position, 2KP, Keyed 2642
SEES-2642-006		Cylinder, Yale Cylinder 2642 PH2, 3 Position, 2KP, Keyed 2642
SEES-2642-MC-001		Keyswitch, Monitor Control, PH1, 3 Position, 2KP, Keyed 2642
SEES-2642-MC-002		Keyswitch, Monitor Control, PH2, 3 Position, 2KP, Keyed 2642
SEES-2642-MC-003NB		Keyswitch, Monitor Control, PH1, 2 Position, 2KP, Keyed 2642, No Bezel
SEES-3502-001A		Keyswitch, 7/8" Cylinder PH1, Prewired, 3 Position, 2KP, Keyed 3502
SEES-3502-002A		Keyswitch, 7/8" Cylinder PH2, Prewired, 3 Position, 2KP, Keyed 3502
SEES-3502-005		Cylinder, Yale Cylinder 3502 PH1, 3 Position, 2KP, Keyed 3502
SEES-3502-006		Cylinder, Yale Cylinder 3502 PH2, 3 Position, 2KP, Keyed 3502
SEES-3502-MC-001		Keyswitch, Monitor Control, PH1, 3 Position, 2KP, Keyed 3502
SEES-3502-MC-002		Keyswitch, Monitor Control, PH2, 3 Position, 2KP, Keyed 3502

Fire Service/FEO Key Switches

*All FEO Key Switches use FEO-K1 key and all FEO Key Switches come with 2 FEO-K1 keys

Universal

S.E.E.S. #	Description
FEO-EP-UNV-001	FEO Fire Service Key Switch, Universal Emergency Power, 3 Position, Rmv3, (Auto-1-2)
FEO-UNV-001	FEO Fire Service, Universal PH 1, 3 Position, Rmv2 (Byp-Off-On)
FEO-UNV-001R	FEO Fire Service, Universal PH 1, 3 Position, Rmv2 (Reset-Off-On)
FEO-UNV-002	FEO Fire Service, Universal PH 2, 3 Position, Rmv2 (Off-Hold-On)
FEO-UNV-003	FEO Fire Service, Universal 2 Position, Rmv2 (Off-On)
FEO-UNV-004	FEO Fire Service Key Switch, Universal, 2 Pos, Rmv1, (Off-On)
FEO-UNV-005	FEO Fire Service Key Switch, Universal 3 Pos, Rmv1, Mom RTC (Off-On)



FEO-EP-UNV-001



FEO-UNV-003



FEO-UNV-004

Fire Service Key Functions

* Means the key is removable in this position

PHASE I HALL	BYPASS	OFF *	ON *	PHASE I HALL	RESET	OFF *	ON *
PHASE II CAR	OFF *	HOLD *	ON *	PHASE II CAR	OFF *	HOLD *	ON

■ After 2000

■ After 2000

■ Prior to the 2000 code, Special orders required for 3 key pull

Innovation

S.E.E.S. #	Description
FEO-INS-001	FEO Fire Service, Innovation, Round, PH 1, 3 Pos, Rmv 2, (Byp-Off-On)
FEO-INS-001P	FEO Fire Service, Innovation, Round, I-Line PH 1, 3 Pos, Rmv 2, (Byp-Off-On)
FEO-INS-001PR	FEO Fire Service, Innovation, Round, I-Line PH 1, 3 Pos, Rmv 2, (Reset-Off-On)
FEO-INS-001R	FEO Fire Service, Innovation, Round, PH 1, 3 Pos, Rmv 2, (Reset-Off-On)
FEO-INS-002	FEO Fire Service, Innovation, Round, PH 2, 3 Pos, Rmv 2 (Off-Hold-On)
FEO-INS-003	FEO Fire Service, Innovation, Round, 2 Pos, Rmv2, (Off-On)
FEO-INS-004	FEO Fire Service Key Switch, Innovation Round, 3 Pos, Rmv 3, (1-AUTO-2)
FEO-INS-SPECIAL	FEO Fire Service Key Switch, Innovation, Round, Special Order
FEO-INS-001	FEO Fire Service, Innovation, Square, PH 1, 3 Pos, Rmv 2, (Byp-Off-On)
FEO-INS-001R	FEO Fire Service, Innovation, Square, PH 1, 3 Pos, Rmv 2, (Reset-Off-On)
FEO-INS-002	FEO Fire Service, Innovation, Square, PH 2, 3 Pos, Rmv 2, (Off-Hold-On)
FEO-INS-003	FEO Fire Service, Innovation, Square, 2 Pos, Rmv 2, (Off-On)
FEO-INS-004	FEO Fire Service Key Switch, Innovation, Square, 3 Pos, 3Kp, (Auto-Off-On)



FEO-INS-001PR



FEO-INS-001R



FEO-INS-002



FEO-INS-003



FEO-INS-002

Traditional

S.E.E.S. #	Description
FEO-TR-001H	FEO Fire Service, Traditional, H, PH 1, 3 Pos, Rmv2, (Byp-Off-On)
FEO-TR-001HR	FEO Fire Service, Traditional, H, PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-TR-001V	FEO Fire Service, Traditional, V, PH 1, 3 Pos, Rmv2, (Byp-Off-On)
FEO-TR-001VR	FEO Fire Service, Traditional, V, PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-TR-002H	FEO Fire Service, Traditional, H, PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-TR-002V	FEO Fire Service, Traditional, V, PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-TR-003H	FEO Fire Service, Traditional, H, 2 Position, Rmv2, (Off-On)
FEO-TR-003V	FEO Fire Service, Traditional, Vertical, 2 Position, Rmv2, (Off-On)
FEO-TR-SPECIAL	FEO Fire Service, Traditional, Special, Fill out Form



FEO-TR-001H



FEO-TR-001HR



FEO-TR-001V



FEO-TR-002H



FEO-TR-002V



FEO-TR-003V

Kone / Montgomery

S.E.E.S. #	Description
FEO-KN-001	FEO Fire Service, Kone, PH 1, 3 Position, Rmv2, (Byp-Off-On)
FEO-KN-001R	FEO Fire Service, Kone, PH 1, 3 Position, Rmv2, (Reset-Off-On)
FEO-KN-002	FEO Fire Service, Kone, PH 2, 3 Position, Rmv2, (Off-Hold-On)
FEO-KN-003	FEO Fire Service, Kone, 2 Position, Rmv2, (Off-On)
FEO-MB-001	Fire Service Key Switch, Montgomery PH 1, 3 Pos, Rmv2, (Byp-Off-On)
FEO-MB-002	Fire Service Key Switch, Montgomery PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-MB-003	FEO Fire Service Key Switch, Montgomery 2 Pos, Rmv2, (Off-On-Fire)
FEO-MB-003E	Fire Service Key Switch, Montgomery PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-MBS-001	Fire Service Key Switch, Montgomery Square PH 1, 3 Pos, Rmv2, (Byp-Off-On)
FEO-MBS-002	Fire Service Key Switch, Montgomery Square PH 2, 3 Pos, Rmv2, (Off-Hold-On)



FEO-KN-001



FEO-KN-003



FEO-MB-001



FEO-MB-002

Double Bezel Fire Service Key Switches

S.E.E.S. #	Description
MIS-189W-IMP-DB	Fire Service 3502 Double Bezel, 3 Pos, Rmv2, PH I Byp-Off-On
MIS-189X-IMP-DB	Fire Key Switch Assembly, 3502 Double Bezel 3 Position, Rmv2, PH II Off-Hold-On
MIS-189Y-IMP-DB	Fire Key Switch Assembly, 2642 Key Double Bezel 3 Pos, Rmv2, PH I Byp-Off-On
MIS-189Y-A-IMP-DB	Fire Key Switch Assembly, 255 Key Double Bezel
MIS-189YY-IMP-DB	Fire Key Switch Assembly, 2642 Double Bezel 2 Pos, Rmv2, PH I Off-On
MIS-189Z-IMP-DB	Fire Service Key Switch, 2642 Double Bezel 3 Pos, Rmv2, PH II Off-Hld-On
MIS-189Z-A-IMP-DB	Fire Service Key Switch, 255 Key Double Bezel
MIS-189Z-NORM-IMP-DB	Fire Service Key Switch, 2642 Dbl Bezel 3 Pos, Rmv2, PH II Norm-Hold-Fireman-Service




MIS-189Y-IMP-DB



MIS-189Y-A-IMP-DB



MIS-189YY-IMP-DB

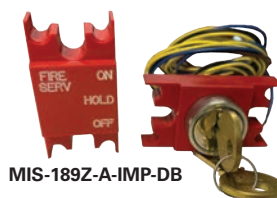

MIS-189Z-A-IMP-DB



MIS-189Z-NORM-IMP-DB

Fire Service Key Switches

S.E.E.S. #	Description
MIS-189W	Fire Key Switch Assembly, 3502 key, 3 Position, Rmv2, PH I Byp-Off-On
MIS-189W-R	Fire Key Switch Assembly, 3502 key, 3 Position, Rmv2, PH I Reset-Off-On
MIS-189X	Fire Key Switch Assembly, 3502 key, 3 Position, Rmv2, PH II Off-Hold-On
MIS-189X-IL	Fire Key Switch Assembly, 3502 key, I-Line 3 Pos, Rmv2, PH II Off-Hold-On, Pancake Switch
MIS-189XX	Fire Key Switch Assembly, 3502 key, 2 Position, Rmv1, PH II (Off-On)
MIS-189Z	Fire Key Switch Assembly, 2642 key, 3 Position, Rmv2, PH II Off-Hold-On
MIS-189Z-BRKT	Bracket, Universal 7/8" "D" flat for Dover & GAL bezels



MIS-189Z-BRKT



MIS-189W



MIS-189X



MIS-189XX



MIS-189Z

Fire Service Key Switch Bezels

S.E.E.S. #	Description
MIS-189Z-BYP-OFF-ON	Bezel, Fire Service PH I, Bypass-Off-On, 7/8" "D" shape
MIS-189Z-OFF-HOLD-ON	Bezel, Fire Service PH II, Off-Hold-On, 7/8" "D" shape
MIS-189Z-OFF-ON	Bezel, Fire Service Off-On 7/8" "D" shape
MIS-189Z-RESET-OFF-ON	Bezel, Fire Service PH I, Reset-Off-On, 7/8" "D" shape
MIS-189Z-SPECIAL	Bezel, Special Marking 1-3/4" O.D. with 7/8" "D" shape
SKB-UNIV-SPECIAL	Schindler Key Switch Bezel, Special Engraving



MIS-189Z-OFF-ON



MIS-189Z-RESET-OFF-ON

Fire Service/FEO Key Switches



FEO-IMR-001H



FEO-IMR-001HR



FEO-IMR-002H



FEO-WB-001



FEO-IMR-003H



FEO-IMS-001H



FEO-IMS-001HR



FEO-IMS-002V



FEO-WB-002



FEO-WB-003



FEO-AU-001R

Impulse

S.E.E.S. #	Description
FEO-IMR-001H	FEO Fire Service, Impulse, Round, H PH 1, 3 Pos, Rmv2, (By-Off-On)
FEO-IMR-001HR	FEO Fire Service, Impulse, Round, H, PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-IMR-001V	FEO Fire Service, Impulse, Round, V PH 1, 3 Pos, Rmv2, (By-Off-On)
FEO-IMR-001VR	FEO Fire Service, Impulse, Round, V, PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-IMR-002H	FEO Fire Service, Impulse, Round, H, PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-IMR-002V	FEO Fire Service, Impulse, Round, V, PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-IMR-003H	FEO Fire Service, Impulse, Round, H, 2 Position, Rmv2, (Off-On)
FEO-IMR-003V	FEO Fire Service, Impulse, Round, V, 2 Position, Rmv2, (Off-On)
FEO-IMR-004H	FEO Fire Service, Impulse Round, Horizontal, 2 Pos, Rmv1, (Off-On)
FEO-IMR-004V	FEO Fire Service, Impulse Round, Vertical, 2 Pos, Rmv1, (Off-On)
FEO-IMR-SPECIAL	FEO Fire Service, Impulse, Square, Special
FEO-IMS-001H	FEO Fire Service, Impulse, Square, H, PH 1, 3 Pos, Rmv2, (By-Off-On)
FEO-IMS-001V	FEO Fire Service, Impulse, Square, V, PH 1, 3 Pos, Rmv2, (By-Off-On)
FEO-IMS-001HR	FEO Fire Service, Impulse, Square, H, PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-IMS-001VR	FEO Fire Service, Impulse, Square, V, PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-IMS-002H	FEO Fire Service, Impulse, Square, H, PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-IMS-002V	FEO Fire Service, Impulse, Square, V, PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-IMS-003H	FEO Fire Service, Impulse, Square, H, 2 Position, Rmv2, (Off-On)
FEO-IMS-003V	FEO Fire Service, Impulse, Square, V, 2 Position, Rmv2, (Off-On)
FEO-IMS-004H	FEO Fire Service, Impulse Square, Horizontal, 2 Pos, Rmv1, (Off-On)
FEO-IMS-004V	FEO Fire Service, Impulse Square, Vertical, 2 Pos, Rmv1, (Off-On)

Westinghouse

S.E.E.S. #	Description
FEO-WB-001	FEO Fire Service, Westinghouse PH 1, 3 Pos, Rmv2, (By-Off-On)
FEO-WB-001R	FEO Fire Service, Westinghouse PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-WB-002	FEO Fire Service, Westinghouse PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-WB-003	FEO Fire Service, Westinghouse, 2 Position, Rmv2, (Off-On)
FEO-WB-SPECIAL	FEO Fire Service, Westinghouse Special, Fill out Form

Dover Aurora

S.E.E.S. #	Description
FEO-AU-001	FEO Fire Service, Aurora, PH 1, 3 Position, Rmv2, (By-Off-On)
FEO-AU-001R	FEO Fire Service, Aurora, PH 1, 3 Position, Rmv2, (Reset-Off-On)
FEO-AU-002	FEO Fire Service, Aurora, PH 2, 3 Position, Rmv2, (Off-Hold-On)
FEO-AU-003	FEO Fire Service, Aurora, 2 Position, Rmv2, (Off-On)

Fire Service/FEO Keys Switches

*All FEO Key Switches use FEO-K1 key and all FEO Key Switches come with 2 FEO-K1 keys.

■ Please see Fire Service Key Function chart on page 347.

US

S.E.E.S. #	Description
FEO-US-001	FEO Fire Service, US, PH 1, 3 Position, Rmv2, (Byp-Off-On)
FEO-US-001R	FEO Fire Service, US, PH 1, 3 Position, Rmv2, (Reset-Off-On)
FEO-US-002	FEO Fire Service, US, PH 2, 3 Position, Rmv2, (Off-Hold-On)
FEO-US-003	FEO Fire Service, US, 2 Position, Rmv2, (Off-On)
FEO-US-SPECIAL	FEO Fire Srv Key Switch, US Round Special Markings and Key Pull
FEO-USB50-001	FEO Fire Service Key Switch, US-B50 PH 1, 3 Position, Rmv2, (Byp-Off-On)
FEO-USS-001	FEO Fire Service, US, Square, PH 1, 3 Pos, Rmv2, (Byp-Off-On)
FEO-USS-002	FEO Fire Service, US, Square, PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-USS-001R	FEO Fire Service, US, Square, PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-USS-003	FEO Fire Service, US, Square, 2 Position, Rmv2, (Off-On)



FEO-US-002



FEO-USS-003

GAL

S.E.E.S. #	Description
FEO-GAL-001H	FEO Fire Service, GAL, Round, H PH 1, 3 Pos, Rmv2, (Byp-Off-On)
FEO-GAL-001V	FEO Fire Service, GAL, Round, V PH 1, 3 Pos, Rmv2, (Byp-Off-On)
FEO-GAL-001HR	FEO Fire Service, GAL, Round, H PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-GAL-001VR	FEO Fire Service, GAL, Round, V PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-GAL-002H	FEO Fire Service, GAL, Round, H PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-GAL-002V	FEO Fire Service, GAL, Round, V PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-GAL-003H	FEO Fire Service, GAL, Round, H 2 Position, Rmv2, (Off-On)
FEO-GAL-003V	FEO Fire Service, GAL, Round, V 2 Position, Rmv2, (Off-On)
FEO-GAL-004V	FEO Fire Service, GAL, Round, Vertical 2 Pos, Rmv1, (Off-On)
FEO-GAL-004H	FEO Fire Service, GAL, Round, Horizontal 2 Pos, Rmv1, (Off-On)



FEO-GAL-001HR



FEO-GAL-002V



FEO-GAL-004H

Adams

S.E.E.S. #	Description
ASKS-FEO-KS2-KN	FEO Fire Service Key Switch, Adams, 3 Pos, Rmv2, K&N Switch
FEO-AD-001	FEO Fire Service, Adams, Round PH 1, 3 Position, Rmv2, (Byp-Off-On)
FEO-AD-001R	FEO Fire Service, Adams, Rn PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-AD-001R-KN	FEO Fire Service Key Switch, Adams Round, PH1 3 Position, Rmv2, (Reset-Off-On) Kraus-Naimer
FEO-AD-002	FEO Fire Service, Adams, Round PH 2, 3 Position, Rmv2, (Off-Hold-On)
FEO-AD-002-KN	FEO Fire Service Key Switch, Adams Round, PH2, 3 Position, Rmv2, (Off-Hold-On) Kraus-Naimer
FEO-AD-003	FEO Fire Service, Adams, Round, 2 Position, Rmv2, (Off-On)
FEO-AD-SPECIAL	FEO Fire Service, Adams Round, Special Markings/Keypull
FEO-ADS-001	FEO Fire Service, Adams, Square, PH 1, 3 Pos, Rmv2, (Byp-Off-On)
FEO-ADS-001R	FEO Fire Service, Adams, Square, PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-ADS-001R-KN	FEO Fire Service Key Switch, Adams Square, PH1, 3 Position, Rmv2, (Reset-Off-On), Kraus-Naimer
FEO-ADS-002	FEO Fire Service, Adams, Square, PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-ADS-002-KN	FEO Fire Service Key Switch, Adams Square, PH2, 3 Position, Rmv2, (Off-Hold-On) Kraus-Naimer
FEO-ADS-003	FEO Fire Service, Adams, Square, 2 Position, Rmv2, (Off-On)
FEO-ADS-003S	FEO Fire Service, Adams, Square, 2 Position, Rmv1, (Off-On)
FEO-ADS-SPECIAL	FEO Fire Service, Adams, Square, Special Markings/Keypull



FEO-AD-002



FEO-AD-003S



FEO-PN-002



FEO-SCH-001R



FEO-SCK-002



FEO-OB-001



FEO-OB-002



FEO-OB-RESET



FEO-OB-105



FEO-OBK-002-PW



FEO-OBK-001



FEO-OBK-101



FEO-OBK-101R



FEO-OBK-LED

Fire Service/FEO Key Switches

*All FEO Key Switches use FEO-K1 key and all FEO Key Switches come with 2 FEO-K1 keys.

■ Please see Fire Service Key Function chart on pg 347.

Payne

S.E.E.S. #	Description
FEO-PN-001	FEO Fire Service, Payne, PH 1, 3 Position, Rmv2, (Byp-Off-On)
FEO-PN-001R	FEO Fire Service, Payne, PH 1, 3 Position, Rmv2, (Reset-Off-On)
FEO-PN-002	FEO Fire Service, Payne, PH 2, 3 Position, Rmv2, (Off-Hold-On)
FEO-PN-003	FEO Fire Service, Payne, 2 Position, Rmv2, (Off-On)

Schindler

S.E.E.S. #	Description
FEO-SCH-001	FEO Fire Service, Schindler CT, PH 1, 3 Position, Rmv2, (Byp-Off-On)
FEO-SCH-001R	FEO Fire Service, Schindler CT, PH 1, 3 Position, Rmv2, (Reset-Off-On)
FEO-SCH-001V	FEO Fire Service, Schindler CT, Vertical Mount PH 1, 3 Pos, Rmv2, (Byp-Off-On)
FEO-SCH-002	FEO Fire Service, Schindler CT, PH 2, 3 Position, Rmv2, (Off-Hold-On)
FEO-SCH-003	FEO Fire Service, Schindler CT, 2 Position, Rmv2, (Off-On)
FEO-SCK-001	FEO Fire Service, Schindler MT, PH 1, 3 Position, Rmv2, (Byp-Off-On)
FEO-SCK-001R	FEO Fire Service, Schindler MT, PH 1, 3 Position, Rmv2, (Reset-Off-On)
FEO-SCK-002	FEO Fire Service, Schindler MT, PH 2, 3 Position, Rmv2, (Off-Hold-On)
FEO-SCK-003	FEO Fire Service, Schindler MT, 2 Position, Rmv2, (Off-On)
FEO-SCK-004	FEO Fire Service Key Switch, Schindler MT 2 Position, Rmv1, (Off-On)

Otis

S.E.E.S. #	Description
FEO-OB-001	FEO Fire Service, Otis M1, PH 1, 3 Pos, Rmv2, (Byp-Off-On)
FEO-OB-001R	FEO Fire Service, Otis M1, PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-OB-001-PW	FEO Fire Service, KeySw, Otis M1 PH 1, 3 Pos, Rmv2, (Byp-Off-On) Wired
FEO-OB-002	FEO Fire Service, Otis M1, PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-OB-002-PW	FEO Fire Service, KeySw, Otis M1 PH 2, 3 Pos, Rmv2, (Off-Hold-On) Wired
FEO-OB-003	FEO Fire Service, Otis M1, 2 Position, Rmv2, (Off-On)
FEO-OB-SPECIAL	FEO Fire Service, Otis M1, Special
FEO-OB-101	Bezel Red, Bypass-Off-On S5 Series
FEO-OB-101R	Bezel Red, Reset-Off-On M3 Series
FEO-OB-102	Bezel Red, Off-Hold-On S5 Series
FEO-OB-105	Bezel Black, Run-Stop, S5 Series
FEO-OB-105	Bezel Red, Off-Hold-On M3 Series
FEO-OB-RESET	Bezel Black, "Reset", S5 Series with Nut for Elevator Communication Failure
FEO-OBK-001	FEO Fire Service, Otis S5 PH 1, 3 Pos, Rmv2, (Bypass-Off-On)
FEO-OBK-001R	FEO Fire Service, Otis S5 PH 1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-OBK-001LR	FEO Fire Service, Otis S5 PH1, 3 Pos, Rmv2, (Reset-Off-On)-LED
FEO-OBK-001L	FEO Fire Service, Otis S5 PH1, 3 Position, Rmv2, (Bypass-Off-On)-LED
FEO-OBK-002	FEO Fire Service, Otis S5 PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-OBK-101	FEO Fire Service, Otis M3 PH1, 3 Pos, Rmv2, (Bypass-Off-On)
FEO-OBK-101L	FEO Fire Service, Otis M3 PH1, 3 Position, Rmv2, (Bypass-Off-On)-LED
FEO-OBK-101LR	FEO Fire Service, Otis M3 PH1, 3 Position, Rmv2, (Reset-Off-On)-LED
FEO-OBK-101R	FEO Fire Service, Otis M3 PH1, 3 Pos, Rmv2, (Reset-Off-On)
FEO-OBK-102	FEO Fire Service, Otis M3 PH 2, 3 Pos, Rmv2, (Off-Hold-On)
FEO-OBK-LED	LED, Red with Harness for OBK Series

Schindler Fire Service

S.E.E.S. #	Description
SKS-2D	Fire Service Key Switch , MT Phase I, 3 Position, Rmv2, On Off, Reset, with AS100 Key
SKS-4	Fire Service Key Switch , with WDO1 key, PHI Hall
SKS-5	Fire Service Key Switch , with WDO1 key, PHII CAR
SCH-INS-001	Fire Service Key Switch , Innovation, Sq, Schindler MT, 2 Pos, Rmv2, (Off-On)
SCH-INS-002	Fire Service Key Switch , Innovation, Sq, PH 1 3 Pos, Rmv2, AS100 (Bypass-Off-On)



FEO-KBX-001



FEO-KBX-002H

Fire Service Cabinets

S.E.E.S. #	Description
FEO-KBX-001	FEO Key Box , Standard 1-3/8" deep, "FIRE DEPT USE ONLY"
FEO-KBX-002H	FEO Key Box , Horizontal Mount 6-3/8" x 8-1/4 1-3/8" Deep, "FIRE DEPT USE ONLY"
FSC-SC1000	Fire Service Cabinet , Latching Cylinder, SC1000 Key
MIS-FSC-001	Fire Service Cabinet , 2004 MOD Front Opening, FEO Key
MIS-FSC-002	Fire Service Cabinet , 2004 MOD Front/Rear Opening, FEO Key
MIS-FSC-003	Fire Service Cabinet , 2004 MOD Front Opening Specify Zone
MIS-FSC-004	Fire Service Cabinet , 2004 MOD Front/Rear Opening Specify Zone



MIS-FSC-002

Otis

S.E.E.S. #	Description
FEO-OBK-AUTO	FEO Fire Service , Otis M3 Emergency Power, 3P, R3, (1-Auto-2)
FEO-OBK-AUTO-S5	FEO Fire Service , Otis S5 Emergency Power, 3P, R3, (1-Auto-2)

OEM Cylinder

S.E.E.S. #	Description
FEO-KS1	Fire Service Key Switch , FEO PH 1, 3 Position, 2 Pull
FEO-KS1A	Fire Service Key Switch , FEO PH 1 3 Position 2 Key Pull, Flats 9 & 3
FEO-KS1B	Fire Service Key Switch , FEO PH 2, 3 Position 2KP, Ext Slotted Shaft
FEO-KS1-HD	Fire Service Key Switch , FEO 3 Pos, 2 Pull, Phase 1, Heavy Duty
FEO-KS2-HD	Fire Service Key Switch , FEO 3 Pos, 2 Pull, Phase 2, Heavy Duty
FEO-KS2	Fire Service Key Switch , FEO PH 2, 3 Position, 2Pull
FEO-KS2-CC	Fire Service Key Switch , FEO 3 Position, 2Pull, Costant Contact
FEO-KS2A	Fire Service Key Switch , FEO PH 2 3 Position 2 Key Pull, Flats 9 & 3
FEO-KS2B	Fire Service Key Switch , FEO PH 2 3 Position 2KP, Ext Slotted Shaft
FEO-KS3	Fire Service Key Switch , FEO 3 Position, 3 Pull
FEO-KS3A	Fire Service Key Switch , FEO 3 Position 3 Key Pull, Flats 9 & 3
FEO-KS3B	Fire Service Key Switch , FEO 3 Position 3KP, Ext Slotted Shaft
FEO-KS4	Fire Service Key Switch , FEO 2 Position, 2 Key Pull
FEO-KS4A	Fire Service Key Switch , FEO 2 Position, 2KP, Flats 9 & 3
FEO-KS5A	Fire Service Key Switch , FEO 5 Position, 5KP, Flats 9 & 3
FEO-KS6	Fire Service Key Switch , FEO 2 Position, 1KP, Flats 12 & 6
FEO-KS6A	Fire Service Key Switch , FEO 2 Position, 1KP, Flats 9 & 3
FEO-KS6AM-KN	Fire Service Key Switch , FEO 2 Position, 1KP K&N DPST MOM Spring Return to Center, Flats 9 & 3
FEO-KS8M	Fire Service Key Switch , FEO 3 Position, 1KP, Mom RTC, Flats 9-3



FEO-KS1A



FEO-KS2-CC



FEO-KS3A



FEO-KS4



MIS-289E-2389



MIS-289E5-2389



FEO-FSLC2



FEO-FSLC3



AZFS-INR-001



AZFS-INR-002

Emergency Power

S.E.E.S. #	Description
MIS-289E-2389	Key Switch, Emerg Power 4 Position, 4KP, 45Deg, H2389 Key
MIS-289-EPB5-2389	Key Switch, Emerg Power 5 Position 5KP Red Round 1-2-3-4-AUTO, H2389
MIS-289E5-2389	Key Switch, Emerg Power 5 Position 5KP, 45deg, H2389 Key

Latching Cylinder

S.E.E.S. #	Description
FEO-FSLC1	FEO Fire Service Latching Cylinder, for Cabinet
FEO-FSLC2	FEO Fire Service Latching Cylinder, for Cabinet, New Version
FEO-FSLC3	FEO Fire Cabinet Lock, Latch Style
FSC-SC1000	Fire Service Latching Cylinder, SC1000 Key for Cabinet
FSLC-001-3502	Fire Service Latching Cylinder, RH/LH, 3502 Key for Cabinet
FSLC-001L-2642	Fire Service Latching Cylinder, LH, 2642 Key for Cabinet
FSLC-001L-3502	Fire Service Latching Cylinder, LH, 3502 Key for Cabinet
FSLC-001R-2642	Fire Service Latching Cylinder, RH, 2642 Key for Cabinet
FSLC-001R-3502	Fire Service Latching Cylinder, RH, 3502 Key for Cabinet

Arizona Fire Service Key Switches

S.E.E.S. #	Description
AZFB-001	Arizona Fire Univ Bezel, PH I (Bypass-Off-On)
AZFB-002	Arizona Fire Univ Bezel, PH II (Off-Hold-On)
AZFB-003	Arizona Fire Univ Bezel, PH I (Reset-Off-On)
AZFB-004	Arizona Fire Univ Bezel, 2 Position (Off-On)
AZFS-001	Key Switch, Arizona Fire Service PH I, 3 Pos, remove 2 with AZFS key
AZFS-002	Key Switch, Arizona Fire Service PH II, 3 Pos, remove 2 with AZFS key
AZFS-003	Key Switch, Arizona Fire Service PH II, 3 Pos, remove 3 with AZFS key
AZFS-004	Key Switch, Arizona Fire Service 2 Position, remove 2 with AZFS key
AZFS-KEY	Fire Service Key, AZFS, used with all Arizona Fire Service Key Swiches
AZFS-FCS-001	Cabinet Latch, PH II, AZFS Key
AZFS-IMS-002V	Arizona Fire Service KeySwitch, Innovation, Square, Vert PH2, 3Pos, Rmv2, (Off-Hold-On)
AZFS-INR-001	Arizona Fire Service, KeySw, Innov Rn PH 1, 3 Pos, Rmv2, (Byp-Off-On)
AZFS-INR-002	Arizona Fire Service, KeySw, Innov Rn PH 2, 3 Pos, Rmv2, (Off-Hold-On)
AZFS-UNIV-001	Arizona Fire Service, Universal KeySw, 2 Position, Rmv2, (Off-On)
AZFS-UNIV-002	Arizona Fire Service, Univ KeySw PH I, 3 Pos, Rmv2, (Byp-Off-On)
AZFS-UNIV-003	Arizona Fire Service, Univ KeySw PH I, 3 Pos, Rmv2, (Reset-Off-On)
AZFS-UNIV-004	Arizona Fire Service, Univ KeySw PH II, 3 Pos, Rmv2, (Off-Hold-On)
AZFS-UNIV-005	Arizona Fire Service, Univ KeySw PH II, 3 Pos, Rmv2, (Off-Hold-On)



AZFS-001



AZFS-002



AZFS-004

South Carolina Fire Service Key Switches

S.E.E.S. #	Description
MIS-189-FS-A	Fire Service Key, SC1000, used with all South Carolina Fire Service Key Switches
SCFS-001	South Carolina Fire Service, PH I 3/4" Cylinder only 3 Position, 2 Pull
SCFS-002	South Carolina Fire Service, PHII 3/4" Cylinder only 3 Position, 2 Pull
SCFS-003	South Carolina Fire Service, PH I 3/4" Cylinder only 3 Position, 3 Pull
SCFS-004	South Carolina Service, PHII 3/4" Cylinder only 2 Position, 2 Pull
SCFS-001-KN	South Carolina Fire Service Keyswitch, PH I 3PDT with Bracket SC1000
SCFS-002-KN	South Carolina Fire Service Keyswitch, PH II 3PDT with Bracket SC1000
SCFS-GAL-001V	South Carolina Fire Service Keyswitch, GAL, Round, Vertical PH 1, 3 Pos, Rmv2, (Byp-Off-On)
SCFS-IMS-001H	South Carolina Fire Service, Impulse KeySwitch, Square, Horizontal, PH I (BYPASS-OFF-ON) 3P, R2
SCFS-IMS-002V	South Carolina Fire Service, Impulse KeySwitch, Square, Vertical, PHII (OFF-HOLD-ON) 3P, R2
SCFS-KSW-001	South Carolina Fire Service Key Switch, 7/8" Cyl PH 1, 3 Pos, Rmv2, (Byp-Off-On)
SCFS-KSW-002	South Carolina Fire Service Key Switch, 7/8" Cyl PH 2, 3 Pos, Rmv2, (Off-Hold-On)
SCFS-OB-001	South Carolina Fire Service Key Switch, Otis Keyswitch Assembly, PH I M1/Adv (Byp-Off-On)
SCFS-OB-002	South Carolina Fire Service Key Switch, Otis Keyswitch Assembly, PH II M1/Adv (Off-Hld-On)
SCFS-OBK-101	South Carolina Fire Service Key Switch, Otis M3 PH1, 3 Pos, Rmv2, (Bypass-Off-On)
SCFS-OBK-102	South Carolina Fire Service Key Switch, Otis M3 PH 2, 3 Pos, Rmv2, (Off-Hold-On)
SCFS-SCH-001	South Carolina Fire Service Key Switch, Schindler CT PH 1, 3 Position, Rmv2, (Byp-Off-On)
SCFS-SCH-002	South Carolina Fire Service Key Switch, Schindler CT PH 2, 3 Position, Rmv2, (Off-Hold-On)
SCFS-TR-001H	South Carolina Fire Service Key Switch, Traditional Horizontal, PH I (Bypass-Off-On)
SCFS-TR-001HR	South Carolina Fire Service Key Switch, Traditional Horizontal, PH I (Reset-Off-On)
SCFS-TR-002V	South Carolina Fire Service Key Switch, Traditional Vertical, PH II (Off-Hold-On)
SCFS-TR-003H	South Carolina Fire Service Key Switch, Traditional Horizontal, 2P, R2 (Off-On)
SCFS-UNV-001	South Carolina Fire Service, Univ Key Switch PH1, 3 Pos, Rmv2, (BYPASSOFF-ON)
SCFS-UNV-001R	South Carolina Fire Service, Univ Key Switch PH1, 3 Pos, Rmv2, (RESET-OFF-ON)
SCFS-UNV-002	South Carolina Fire Service, Univ Key Switch PHII, 3 Pos, Rmv2, (OFF-HOLD-ON)
SCFS-UNV-003	South Carolina Fire Service, Univ Key Switch, 2 Pos, Rmv2, (OFF-ON)
SCFS-US-001	South Carolina Fire Service Key Switch, U.S. Round PH 1, 3 Pos, Rmv2, (Byp-Off-On)
SCFS-US-002	South Carolina Fire Service Key Switch, U.S. Round PH 2, 3 Pos, Rmv2, (Off-Hold-On)
SCFS-USS-001	South Carolina Fire Service Key Switch, U.S. Square PH 1, 3 Pos, Rmv2, (Byp-Off-On)
SCFS-USS-002	South Carolina Fire Service Key Switch, U.S. Square PH 2, 3 Pos, Rmv2, (Off-Hold-On)

■ For Virginia, Louisiana, Florida refer to the SEES State Catalogs



SCFS-001



SCFS-002



SCFS-001-KN



SCFS-TR-002V



SCFS-USS-002